


Sungrow Wi-Fi Configuration

- 1) Insert WiFi dongle to the inverter and wait until the first LED light which labelled as "RUN" turns on.
- 2) In mobile WiFi settings, search for the WiFi "SG-XXXXXXX" and connect. If a password required, use the serial number of the dongle as the password.
- 3) Choose either Method 1 or Method 2 below to complete WiFi configuration
- 4) After connecting successful, all three LED lights on WiFi dongle should be on.



Method 1: Open iSolarCloud -> click “ ” -> select “WLAN Configuration”-> Scan the QR code on the WiFi dongle -> select the WiFi network and put in the password.

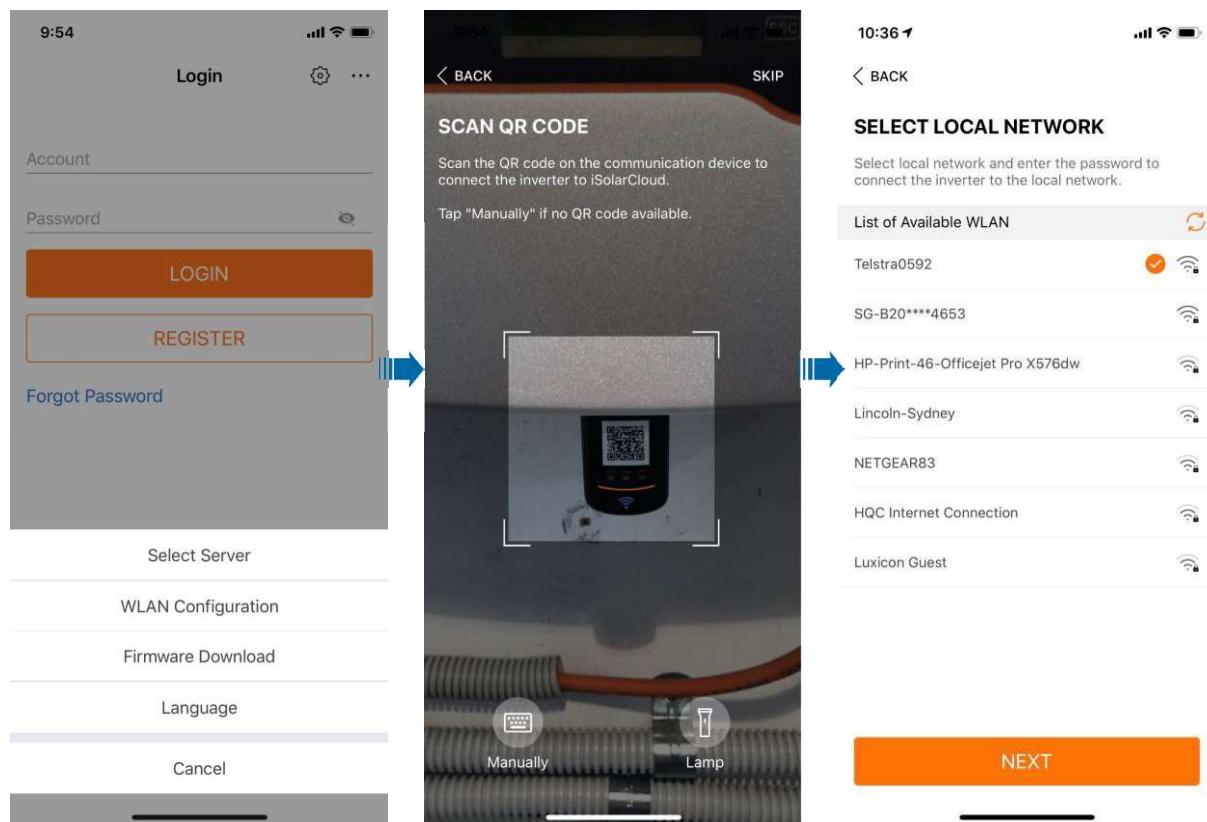

Method 2: Open iSolarCloud -> Local Access -> WLAN -> Login inverter with the account “admin” and password “pw8888” -> WLAN Configuration -> select the WiFi network and put in the password.

