


AlphaEss Smile5 Wi-Fi configuration:

05

CONFIGURATION NETWORK (WIFI OPTIONAL)



Please install the WiFi module. Download and install the APP by scanning the QR code below, and directly connect to this device by WiFi module.

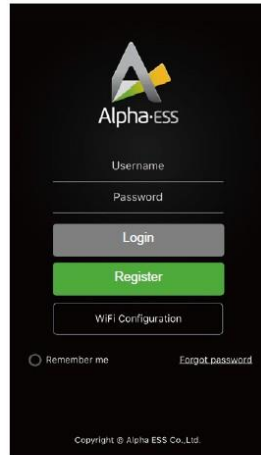



Step 1: Open AlphaESS APP, click the "Wi-Fi Configuration" button and enter the WiFi configuration interface






Step 2: After that please check whether your mobile phone has connected to the system hotspot

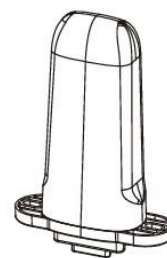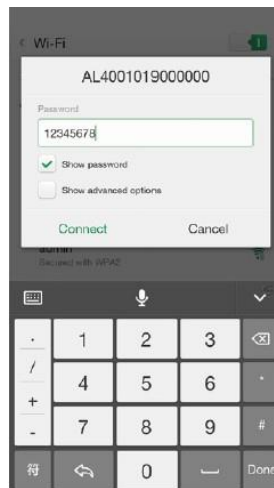

Step 3: If your mobile phone hasn't connected to the system hotspot, please open the Wi-Fi network list. Please find the hotspot named after the product SN in WLAN list then enter the password 12345678 and connect to it. After successfully setting it, please go back to APP and click "Next" .

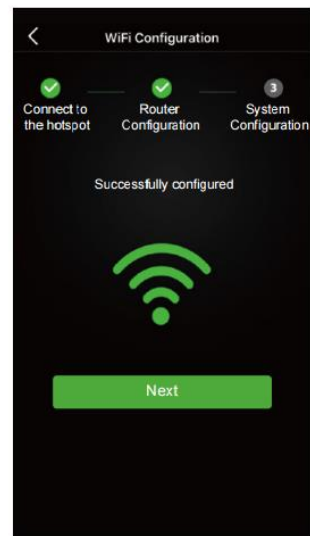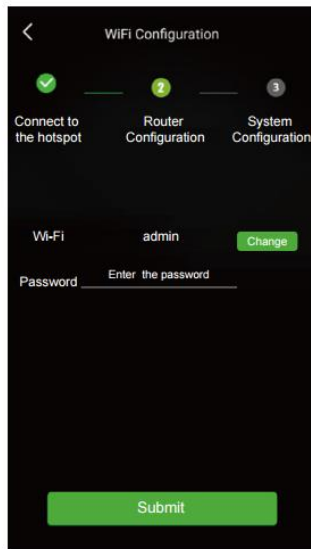

Step 4: Enter the Wi-Fi account and password and save it. If the configuration is successful, click "Next",

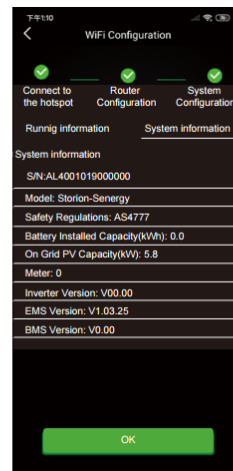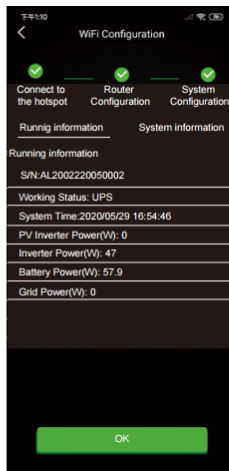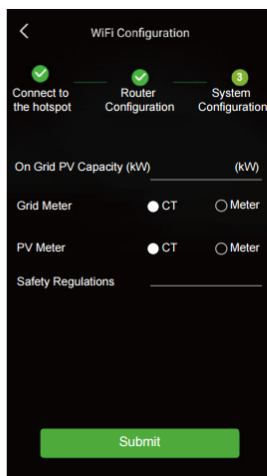

Step 5: Set the basic parameters, and you can see the device details. Click the "Submit" button.

Safety Regulation Setting: AS4777.2 for Australia. VDE4105/11.18 for Germany, CEI0-21 for Italy, G98/G99 for Britain. NRS097-2-1 for South Africa. RD1699 for Spain. For other details please find in Section 9.2.